www.eonon.com

Wishing roads were longer.

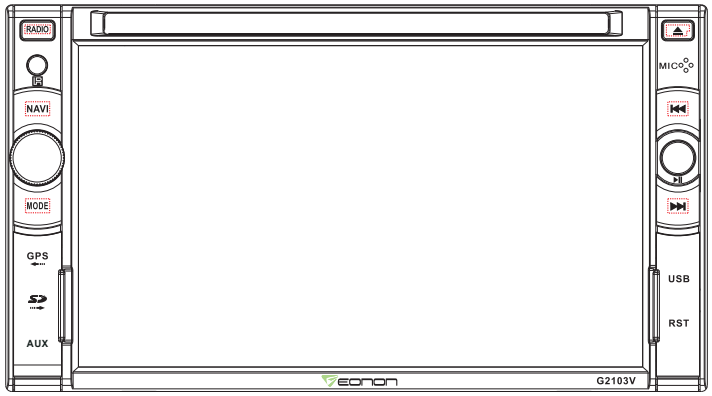

Model: G2103V

User Manual

Please read this manual before using and save this manual for future reference.

Safety Cautions

This unit is applicable to 12V automotive power system (minus earth), do not install this unit directly on other automotive device of 24V, otherwise damage of this unit will be resulted in.

Do not operate this unit while in driving. To prevent breach of the traffic laws & regulations, do not watch programs or operate this unit while in driving, otherwise accidents may be caused.

For the sake of safety and to ensure the normal use of the product, please have a professional who sells this product to install it, do not dismantle or repair this unit without permission, otherwise damage of this unit or accidents may be caused.

Do not place this product in humid environment or water to prevent electric shock, damage or fire hazard due to short circuit.

The display screen of this product adopts precision electronic structure; do not knock the TFT display screen by hand, otherwise injury or damage may be caused.

Back surveillance function of this unit can only be used for auxiliary purpose while in backing a car, our company assumes no responsibilities for any accidents occurred thereof.

eonon

Contents

Panel Keying 3
Functions on main menu 5
DVD Functions 7
DVD Play 8
VCD Play 9
Search & Play 10
CD/MP3/WMA Disc Play 11
JPGE File Play 12
USB/SD Play 12
Radio function 13
RDS function 14
Digital TV Function 16
Auxiliary Input function 17
Bluetooth function 18
Bluetooth music function 19
Navigation function 21
IPOD function 21
Rear View Camera function 22
Setting function 22
Generic Setting 23
Audio setting 25
Time setting 26
Calendar setting 27
Steering wheel control setting 28
Setting of Navigation path 29
Mark setting 30
RDS setting 31
Touch screen calibration 32
Wiring Diagram 33
Precautions 34
Troubleshooting 35

Caution

For safety & proper use of this product, please carefully read this Manual, which is subject to change of specification & design due to technological improvement without further notice!

Panel Keying

User shall find the corresponding functions in the following table in accordance with the push-button silk-screen printing on faceplate:

<Faceplate Function Button> Table:

Push-button	Functions						
	Navigation Mode	DVD Mode	USB/SD Mode	Radio Mode	External Input Mode	Bluetooth Mode	IPOD Mode
	MUT/ **Startup& Shutdown**	MUT/ **Startup& Shutdown**	MUT/ **Startup& Shutdown**	MUT/ **Startup& Shutdown**	MUT/ **Startup& Shutdown**	MUT/ **Startup& Shutdown**	MUT/ **Startup& Shutdown**
	Volume Up /Down	Volume Up /Down	Volume Up /Down	Volume Up /Down	Volume Up /Down	Volume Up /Down	Volume Up /Down
	Non-function	Confirm	Confirm	Confirm	Non-function	Non-function	Confirm
	Non-function	Fast forward /Fast backward	Fast forward /Fast backward	Fine-tuning frequency	Non-function	Non-function	Confirm
RST	Reset	Reset	Reset	Reset	Reset	Reset	Reset
RADIO FM/AM	Enter radio function	Enter radio function	Enter radio function	AM/FM switch	Enter radio function	Enter radio function	Enter radio function
GPS NAVI	Exit the navigation function	Enter the navigation function	Enter radio function	Enter radio function	Enter radio function	Enter radio function	Enter radio function
DVD	Enter DVD function	Non-function	Enter DVD function	Enter DVD function	Enter DVD function	Enter DVD function	Enter DVD function
AUX	Enter external input function	Enter external input function	Enter external input function	Enter external input function	Non-function	Enter external input function	Enter external input function
SRC MODE	Mode shift **/Back to main menu**	Mode shift **/Back to main menu**	Mode shift **/Back to main menu**	Mode shift **/Back to main menu**	Mode shift **/Back to main menu**	Mode shift **/Back to main menu**	Mode shift **/Back to main menu**

Troubleshooting

Before sending this unit for repair, check the problem that has occurred with the unit against the following table, and take corresponding countermeasures to carry out simple inspection or minor adjustment, thus the problem may be possibly eliminated and the unit may restore normal operation. If the problem cannot be effectively resolved with the remedies as shown in the table, please contact our company or the professional maintenance center.

Problem	Possible cause	Countermeasure
LCD no display	Power switch and ignition switch not connected	Connect the switch
	Connection wire loose	Reconnect it properly
	Protective tube burn out	Replace it with a new protective tube
No sound played	The system is in Mute status	Shut off Mute
	Sound box connection loosen off	Reconnect it properly
	Sound box damaged	Replace it with a new sound box
No image played	Disc not properly loaded	Place the disc with the label side face-up on the tray
	Disc dirty or damaged	Try other discs
Occasional sound jumping	Disc dirty or damaged	Try other discs
Musical sound jumps while in vibrating	Host machine not properly installed	Ensure the host machine firmly fixed
	Changer fixing screw screwed down in the wrong position	Adjust the screw marked with screwdriver to the proper mounting direction
Bluetooth handfree non-function	Not properly matched with host machine	Rematch

Warning

Directions: please operate it in accordance with this Manual before using;

This unit is made of precision components, pay attention to guard against damp;

Pay attention to prevent LCD display being scratched;

High pressure in the unit, dismantlement can only attempted by authorized personnel;

Instructions: few color dots may appear on LCD display, it is a common phenomenon in active matrix display technology, and does not represent any defects or faults.

Thanks for your use

Push-button	Functions						
	Navigation Mode	DVD Mode	USB/SD Mode	Radio Mode	External Input Mode	Bluetooth Mode	IPOD Mode
EJECT ⏏	Eject the disc	Eject the disc	Eject the disc	Eject the disc	Eject the disc	Eject the disc	Eject the disc
⏯ PLAY	Non-function	Pause/Play	Pause/Play	Non-function	Non-function	Non-function	Pause/Play
SEEK ⏮	Non-function	Previous song	Previous song	Progressive station scanning	Non-function	On the phone	Previous song
SEEK ⏭	Non-function	Next song	Next song	Downward station scanning	Non-function	Hang up	Next song
MUTE	Mute	Mute	Mute	Mute	Mute	Mute	Mute
DIMMER	Backlight Adjustment	Backlight Adjustment	Backlight Adjustment	Backlight Adjustment	Backlight Adjustment	Backlight Adjustment	Backlight Adjustment
STOP	Non-function	Stop Play	Stop Play	Non-function	Non-function	Stop Play	Stop Play

Note: the bold font means to press the button for long time to realize the function.

Functions on Main Menu

This car multimedia entertainment system provides DVD, Radio, External Input, Bluetooth, Navigation, SD, USB, and IPOD functions, user can realize the relevant functions justby directly touching the function modules on the main menu. Return to the main menu by touching the right corner on touch screen under different play modes.

As shown in the following picture:

Picture 1

Picture 2

Precautions

1.Precautions for host machine

- Do not insert hard object or other metal contents in the unit.
- Do not attempt to repair it. This display screen consists of many precision electronic components, damage or breakage may be resulted in by any dismantlement or modification, power it off immediately in case of a failure, and notify the company or your dealer of that.
- Do not expose the display screen to humidity, dust, steam, oily fume or any other pollutants.
- Do not wipe the surface of display screen with thinner or other chemical cleaners; wipe away the dirt on the surface with a soft cloth.
- Do not expose the display screen to sunlight for a long time.
- If moisture content or other objects enter this unit, power it off immediately and contact with the company or your dealer.
- Please cut off the power when clearing off the dirt.
- This product is designed for the vehicle equipped with 12V negative grounding battery system.

2. Precautions for Use of Disc

- Misoperation would be caused when dirty, dusty, scratched or bended disc was used.
- Do not put it on sharp objects to prevent disc being scratched.
- Disc shall be taken out when not used.
- Disc shall not be placed in the following areas:
  1.Area exposed to direct sunlight.
  2.Dirty, dusty and humid areas.
  3.Area where there is an auto heater nearby.
  4.On vehicle seat or meter panel.
- Do not use disc with diameter less than 12cm (12cm excluded) or irregularly shaped disc (heart shape or octagon and so on)
- Disc cleaning: wipe the disc surface with a soft wet cloth; if the disc is very dirty, wipe it gently with a soft cloth soaked with warm propanol liquid. Do not use solutes, such as gasoline, thinner and so on, to prevent disc surface being scratched.

3. Precautions for External Connected Power Amplifier

- Before connecting, check to ensure the sound box impedance matches the optimal matching impedance of power amplifier.
- Please select high-quality loudspeaker cable; the cable length shall be just sufficient for proper in-position connection.
- When connecting the signal line, the jack/interface of sound track shall match exactly.
- To reduce noise, when there is a external connected power amplifier, first adjust the volume of Host machine to 1/3 of the maximum sound level, and then adjust the volume of external connected power amplifier, till the sound is distorted (note: the tone shall be adjusted centered).
- While in installation, the input/output line shall be far away from power source and computer wire, otherwise noise may be caused.

Wiring Diagram

Audio-Visual Navigation&Entertainment System

DC voltage 12V Negative electrode GND Output Power:4X65W Total current:：≤15A

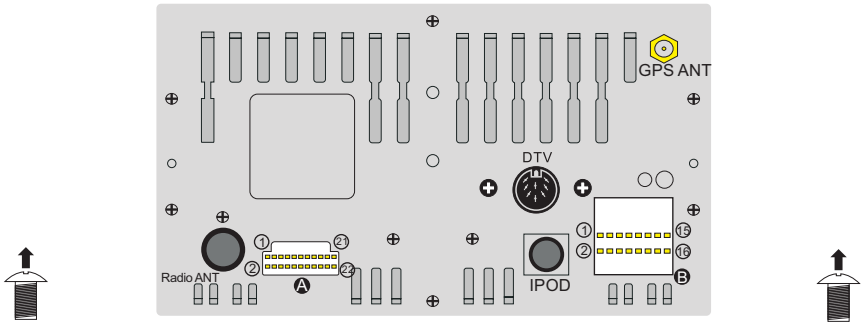

A:

① Black:KEY GND (Steering Wheel control(GND)
② Red:KEY2(Steering Wheel control2)
④ White:KEY1(Steering Wheel control1)
⑧ Yellow:CAMERA(Reversing video input)
⑩ Green:AUX-CVBS(External video input)
⑪ RED:AUX-IN-R(Right audio channel input)
⑫ White:AUX-IN-L(Left audio channel input)

B:

① Black:GND(grounding)
② Yellow:B+(Power+)
③ Oranger:ILLUMI(Headlight control))
④ Red:ACC(ignition)
⑤ Orange and black stripe:AMP PEM
⑥ P-ANT Blue:(Antenna control)
⑦ Brown:REVERSE(Reversing control)
⑧ Pink:PARKING(Braking control)
⑨ Purple and black stripe:PR-Right,negative
⑩ Green and black stripe:RL-,Rear-left speaker,negative
⑪ Purple:PR+,Rear-right speaker,positive
⑫ Green:RL+,Rear-left,positive
⑬ Grey and black stripe:FR-,Front-right,negative
⑭ White and black stripe:FL-,Front-left,negative
⑮ Grey:FR+,Front-right,positive
⑯ White:FL+,Front-left,positive

Note:Two mechanism retaining screws must be taken out before installation;otherwise disk may not be able to be put in!

<Function Buttons on Main Menu>Table

Serial no.	Serial number of push-buttons
1	Show current time and date(time and date can update automatically after GPS signal received)
2	Adjust the Backlight
3	Back to the previous working status
4	Enter the function list menu (shown as picture 2)
5	Enter the radio function
6	Enter the navigation function
7	Enter the DVD function
8	Enter the setting function
9	Enter the Bluetooth function
10	Enter the IPOD function
11	Enter the auxliary input function
12	Back to the main menu
13	Enter the steering wheel control function
14	Enter the rear view camera function
15	Enter the SD function
16	Enter the USB function
17	Enter the Digital TV Function

Notes:

1.The 5 function icons on the main menu (picture 1) are normal function icons .The setting method of normal function icons :Enter the function list menu(picture 2),hold a chosen icon for 3 seconds and drag it downward to the third row ,then back to the main menu(picture 1),users can see the chosen icon is shown in the normal function icons zone.

2.The gray icon in the function list(picture 2) are optional function icons.

DVD Function Operation

This car multimedia entertainment system can play discs of various formats, such as DVD/VCD/CD/MP3/WMA/JPEG/MPEG and so on (limited to the standard round disc with diameter of 12CM).

Basic Operation

Enter/Exit <DVD Function Operation>

Under the main menu touch " " icon to enter the DVD Function.
Under the DVD status, touch the right upper corner of the screen to exit the DVD Function

Touch " " icon on DVD menu to exit the DVD Function.

Enter/Exit the disc operation

Put the side with silk-screening up, lightly put it in the slot; the disc drive can load in the disc and play it automatically, touch" "button again to eject out the disc.

DVD Hidden Functions

To enable user to use it more conveniently and quickly, hidden press-button function is specially designed with this car multimedia entertainment system, eight hidden touch zones are divided under the DVD play status, as shown in the following diagram:

	A	B
C	D	E
F	G	H

<DVD Hidden Button Functions>Table

Serial no.	Functions
A	Pop-out the Search Menu
B	Return to Main Menu
C	Previous song
D	Pop-out DVD Function Buttons
E	Next song
F	Fast backward
G	Pause/Play
H	Fast forward

Touch Screen Calibration

Touch" " icon in system setting menu to enter the touch screen calibration interface.
Method of calibration: aim the touch pen at the central position of "+" icon, press it continuously till the "+" icon run to the next point of calibration, repeat the above operation, calibrate five points properly in the sequence as shown in the following diagram, and then randomly touch one position of the touch screen to exit the touch screen calibration status, if it does not aim at the central position of "+" icon while in calibration, recalibration needs to be carried out, exit the touch screen calibration status till the touch screen is properly calibrated.

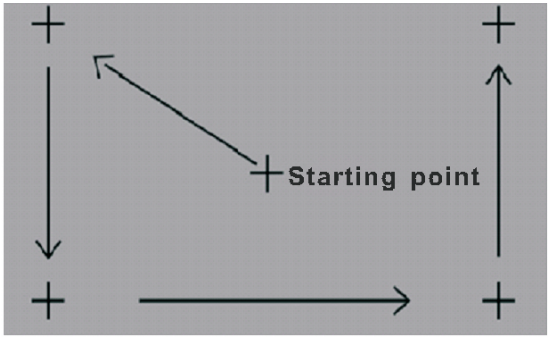

<System Version Inquiry Button> Table

Serial no.	Functions
1	Applications inquiry
2	Operation system inquiry

RDS Setting

Touch " RDS " icon in Setting menu to enter the RDS Setting function.

<RDS Setting Button> Table

Serial no.	Functions
1	RDS switch :ON/OFF
2	TA option setting
3	TA retune setting
4	Clock sync:ON/OFF

Notes: please use standard genuine disc, keep the disc clean, and keep good use habit to guarantee the normal service life of this car multimedia entertainment system.

DVD play

During the DVD playing, touch the midpoint position of touch screen (D zone), <DVD Play Button> pops out, touch the midpoint position (D zone) again, <DVD Play Button> shuts off.

<DVD Play Button> exits automatically if no operation is carried out for 10 seconds. As shown in the following diagram.

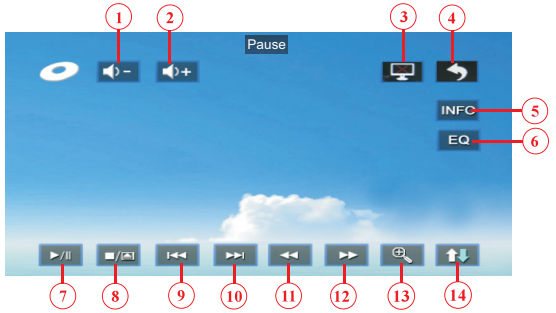

Page 1 of <DVD Play Button> Table

Serial no.	Functions
1	Volume down
2	Volume up
3	Shut off the display screen,and open It by touching any position on It
4	Return to Main Menu
5	Display the current play information
6	Enter EQ Setting
7	Pause/Play
8	Stop/Play
9	Previous song
10	Next song
11	Fast backward
12	Fast forward
13	Zoom
14	Enter page 2

Touch" " icon to enter the Play Buttons on P2. As shown in the following diagram.

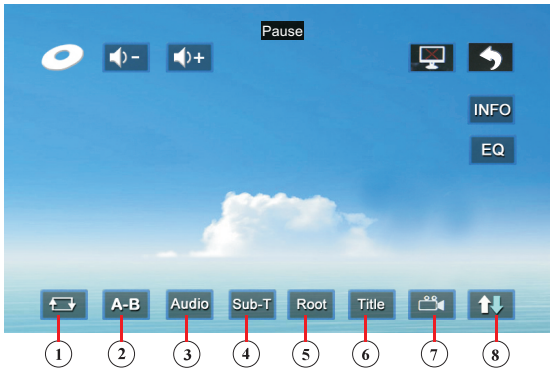

Page 2 of <DVD Play Button> Table

Serial no.	Functions
1	Repeat play
2	A-B repeat play
3	Sound Channel/Language Switchover
4	Caption Switching
5	Return to Main Menu
6	Return to Title Menu
7	Angle switching (to be supported by disc)
8	Enter menu on page 1

VCD Disc Play

The menu operation for VCD disc play is similar to that of DVD play; PBC (main menu of disc) function is effective only to VCD2.0 disc.

Mark Setting

Touch " Mark " icon in Setting menu to enter the Mark Setting function.

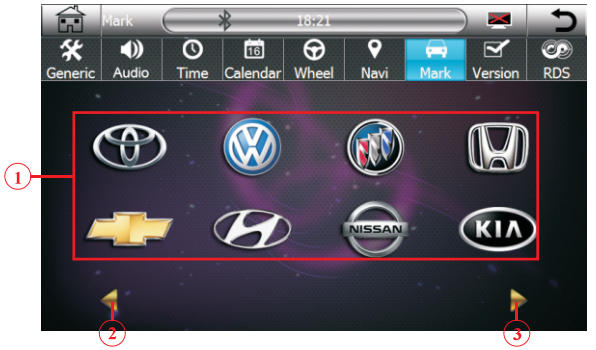

<Mark Setting Button> Table

Serial no.	Functions
1	Normal used car mark
2	Marks on previous page
3	Marks on next page

Method of Car Mark Setting:

1.Enter the car mark setting interface.

2.Select the corresponding car mark on the screen to complete setting of car mark.

System Version Inquiry

Touch " Version " icon in Setting menu to enter the System Version Inquiry function .

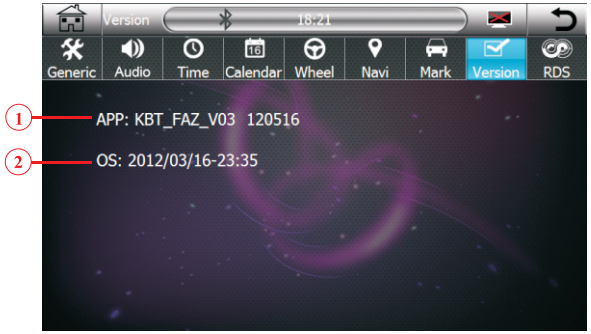

Navigation Path Setting

Touch " Navi " icon in Setting menu to enter the Navigation Path Setting function.

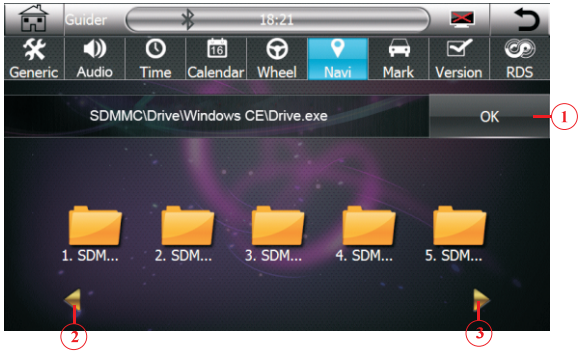

<Setting of Navigation Path Button> Table

Serial no.	Functions
1	Confirmation
2	Files on previous page
3	Files on next page

Setting method of navigation path is as follows:

1.Enter the navigation path-setting page.

2.Select navigation engine file, with general file extension name of .exe.

Touch "**OK** "to finish the setting.

Search Play

During disc playing, touch the upper-middle position on the touch screen (A zone), the <Search Play> menu pops out, and touch" EXIT " icon to shut off the <Search Play> menu.

If no operation is conducted for 10 seconds, <Search Play> menu exits automatically. As shown in the following diagram:

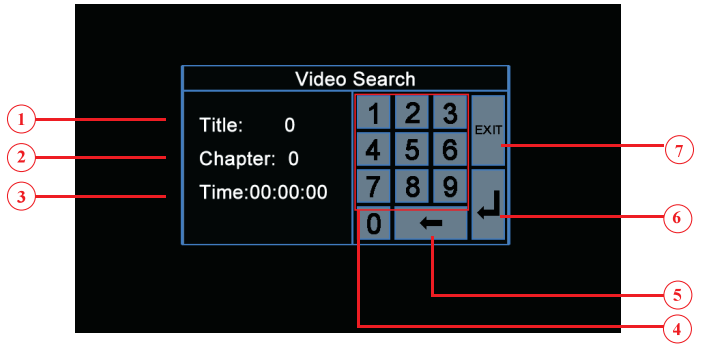

<Search Play Button>Table

Serial no.	Functions
1	Search Title
2	Search Chapter
3	Search Time
4	Number Key
5	Confirm the Search
6	Delete a Number Entered
7	Exit <Search Play > Menu

For example: to play the program section at the thirty-fifth minute

1.Touch the upper-middle position of touch screen (A zone) to pop-out the <Search Play> Menu.

2.Touch“ Time:00:00:00 ” icon, enter number "3500", and then touch“ ↵ ” to confirm it, the system automatically switch to the designated position and play.

CD/MP3/WMA Disc Play

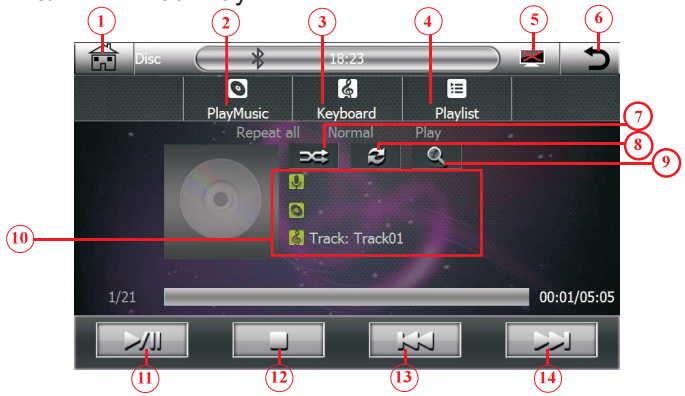

<CD/MP3/WMA Disc Play >Table

Serial no.	Functions
1	Return to function list
2	Display current play information
3	Enter keyboard search play interface
4	Enter play list interface
5	Shut off the display screen,and open it by touching any position on it
6	Exit <CD/MP3/WMA Disc Play >function
7	Normal play/Random play switch
8	Repeat play setting
9	Normal play/Scanning play switch
10	Display the current play information
11	Pause/Play
12	Stop
13	Previous song
14	Next song

Steering Wheel Control Setting

Touch “ Wheel ” icon under Setting menu to enter the steering wheel control interface.

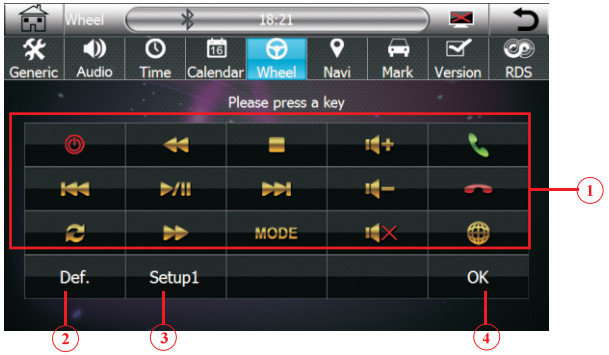

<Steering Wheel Control Button> Table

Serial no.	Functions
1	Common Function Buttons
2	Clear all Steering Wheel Buttons Settled
3	Save setup1/setup2/setup3
4	Confirmation

Set the operating method of steering wheel buttons:

The setting method of “ ”key in the steering wheel is as follows:

1.Enter the steering wheel setting interface.

2.Press down the “ ” key in the steering wheel.

3.Touch the “ ” key on the screen.

4.After setting all press-buttons in steering wheel, touch the Confirm button on the screen to complete steering wheel setting.

Calendar Setting

Touch " Calendar " icon in Setting menu to enter the Calendar Setting interface.

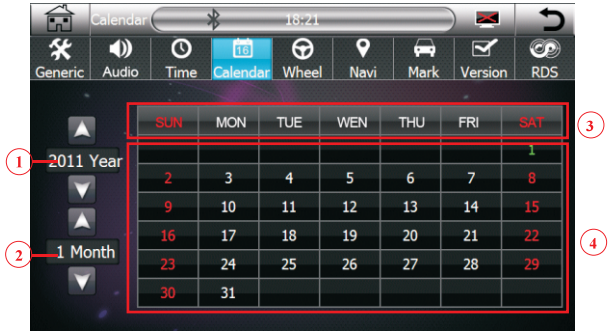

<Calendar setting button> Table

Serial no.	Functions
1	Year setting
2	Month setting
3	Week display
4	Date setting

JPEG File Play

This car multimedia entertainment system supports the JPEG image file; you can enjoy images through the screen.

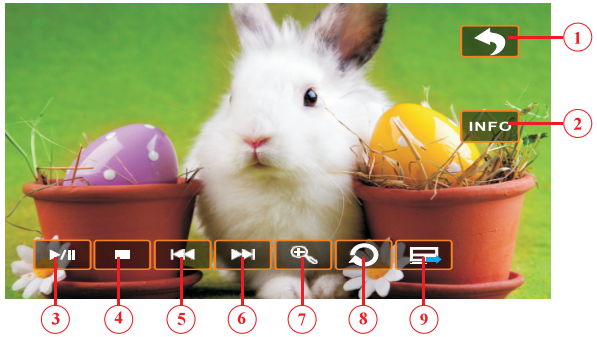

<JPEG Play Button> Table

Serial no.	Functions
1	Return to Main Menu
2	Instruction of current play information
3	Pause/Play
4	Stop
5	Previous image
6	Next image
7	Zoom
8	Rotate the image (respectively rotate by 90, 180, 270 and zero degrees)
9	Select the image switch mode

USB/SD/ Play

USB/SD supported files: MP3/WMA/JPEG/MPEG video files.

Basic Operation

Enter/Exit <USB-SD> Function

- Under the main menu touch " USB SD " icon to enter the USB-SD function.
- Under other status, insert in USB-SD equipment, it automatically enters the USB-SD function.
- Touch " " icon under <USB-SD> menu to exit the USB-SD function.
- Pull out USB-SD equipment, the USB-SD function exits automatically.

Notes:

Please refer to CD/MP3/WMA Disc Play for the operating method of MP3/WMA file.

Please refer to JPEG File Play for the operating method of JPEG files.

Please refer to DVD Disc Play for the operating method of MPEG files.

Radio Function

Basic Operation

Enter/Exit <Radio> Function

- Under the main menu touch“ ” icon to enter Radio Function.
- Touch“ ” icon under Radio menu to exit the Radio Function.

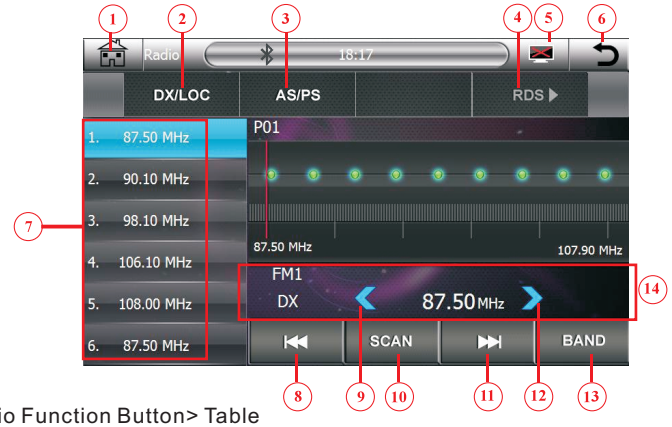

<Radio Function Button> Table

Serial no.	Functions
1	Return to Function list
2	Long/Short range switchover
3	Scan the stations saved/Press continuously for three seconds for automatical station scanning save
4	Enter RDS function
5	Shut off the display screen,and open it by touching any position on it
6	Exit Radio Function
7	Saved station list(drag the list up and down to turn page)
8	Semi-automatically scan stations to low-end frequencies
9	Fine-tuning to low-end frequency
10	Scan full-band stations
11	Semi-automatically scan stations to high-end frequencies

Time Setting

Touch “ ” icon under the setting menu to enter the Time Setting interface.

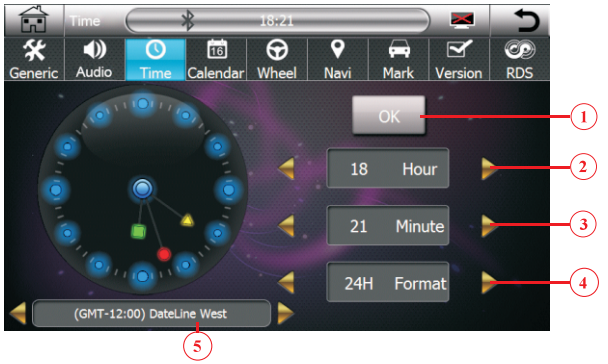

<Time Setting Button> Table

Serial no.	Functions
1	Confirmation
2	Hour setting
3	Minute setting
4	Time format setting
5	Time zone setting

Audio Setting

Touch "Audio" icon under the setting menu to enter the Audio Setting interface.

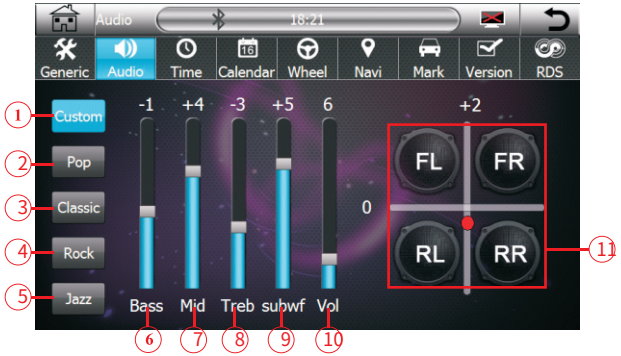

<Audio Setting Button> Table

Serial no.	Functions
1	Custom mode
2	Popular mode
3	Classic mole
4	Rock mode
5	Jazz mode
6	Bass tuning
7	Mediant tuning
8	Treble tuning
9	Subwoofer tuning
10	Volume tuning
11	Balance tuning:Forward/Backword/Leftward/Rightward

12	Fine-tuning to high-end frequency
13	Band switch
14	Display current play information

Note: When RDS is set to close or have no RDS function, RDS icon (serial number 4) is grayed out and the icon will have no work.RDS is not available in Japan.

RDS function

Under the radio function menu touch"RDS" icon to enter the RDS function interface.

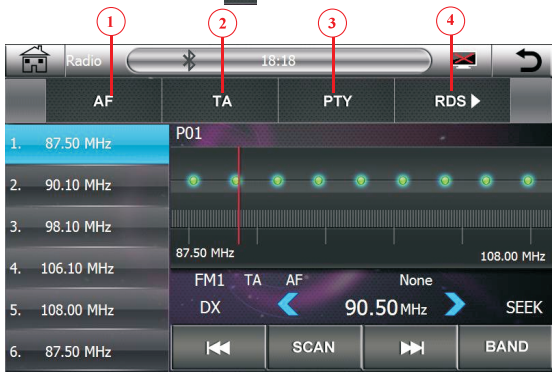

<RDS Function Button> Table

Serial no.	Functions
1	Automatic frequency switching
2	Play traffic announce information program
3	Program type switching
4	RDS/Radio interface switchover

Station Scan

- Search FM/AM waveband
  Touch“BAND” key in Radio interface, switch the waveband among FM1/FM2/FM3/AM.
- Semi-automatical station scan
  Touch “⏭” key in Radio interface, the system automatically scans signals to high-end frequencies, and stops when broadcast station with strong signal or in good receive status is scanned; or retouch the key to stop scanning.
  Touch “⏮” key in Radio interface, the system automatically scan signals to low-end frequencies, and stops when broadcast station with strong signal or in good receive status is scanned; or retouch the key to stop scanning.
- Fine-tuning station
  Touch" ◀ ▶ "icon in radio interface ,fine tuning to low-end/high-end frequencies.
- Full-automatical station scan
  Continuously press" AS/PS "key in Radio interface for three seconds,the system automatically carries our full-frequency scanning,and saves the broadcast stations with sufficient strong or in good receive status in Preset Station Frequency List.
- Play of selected saved station
  Select the waveband you wanted, and touch the Saved Station Play in Radio interface.
- Manual Station Saving
  Select the waveband, and then scan the station at the required frequency, select the frequency of the station number you want to save, press the display bar continuously for three seconds, the station is saved to the designated position.
- Local Scan Mode (LOC)
  Local Scan Function (LOC) only scans the stations with sufficient strong signal and in good receive status; when Local Scan Function is activated, the DX icon on the screen changes to LOC.

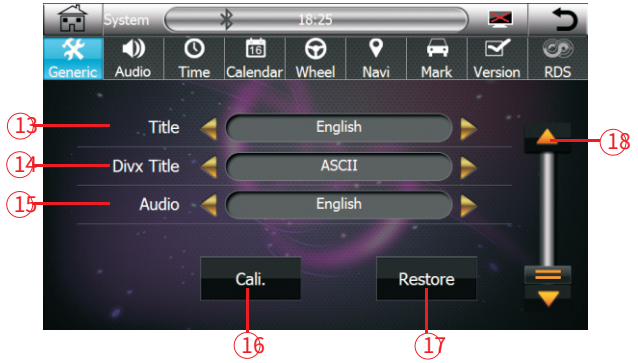

Picture 3

<Generic Setting Button> Table

Serial no.	Functions
1	Automatically answer setting::ON/OFF
2	Keypad tone setting::ON/OFF
3	Navigation mix switch:ON/OFF
4	Brake warning setting :ON/OFF
5	Screen-saver time setting, range of adjustment: 0~30m shut off.
6	Enter into picture 2
7	Language setting
8	Rear view camera setting
9	Image switch effect setting
10	Radio region setting
11	Back to picture 1
12	Enter into picture 3
13	Set DVD caption
14	Set DIVX caption
15	Set DVD language
16	Touch screen calibration
17	Restore to factory defaults
18	Back to picture 2

<Setting Button> Table

Serial no.	Functions
1	Generic setting menu
2	Sound setting menu
3	Time setting menu
4	Calendar setting menu
5	Steel wheel control setting menu
6	Navigation setting menu
7	Car mark setting menu
8	System version inquiry
9	RDS setting menu

Generic Setting

Touch "Generic" icon under the setting menu to enter the Generic Setting interface.

Picture 1

Picture 2

Digital TV Function Operation (Optional)

（Eonon Digital TV Receiver must be connected well.）

1.Touch "MODE" icon on the panel several times, or press "MODE" button on remote control to switch into TV function.

2.Touch "TV" icon on the screen to enter into TV mode directly

3.Please refer Digital TV receiver box user manual for more touch panel functions

Auxiliary Input Function

Basic Operation

Enter/Exit<Auxiliary Input>Funciton

- Under main menu touch“ ” icon to enter the Auxiliary Input Function.
- Touch“ ” icon in Auxiliaryl Input menu to exit Auxiliary Input Function.

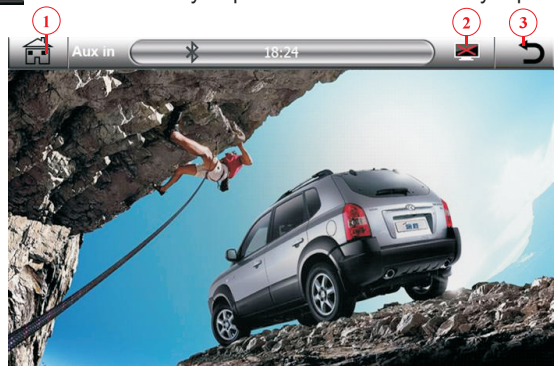

<Auxiliary Input Function Button> Table

Serial no.	Functions
1	Return to Function list
2	Shut off the display screen,and open it by touching any position on it
3	Exit Auxiliary Input Function

Rear View Camera Function

Basic Operation

Enter/Exit <Rear View Camera> Function

- Adjust the gear of vehicle to the reverse gear to enter the Rear View Camera Function automatically.
- Touch the “ ” icon under <Rear View Camera> menu to exit the Rear View Camera Function.
- Adjust the vehicle gear to the forward or stop gear; it automatically exits the Rear View Camera Function.

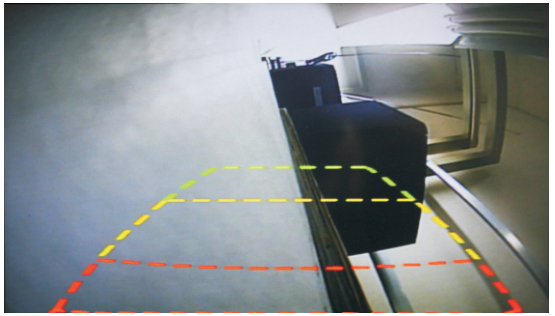

Setting Function

Basic operation

Enter/Exit the <Setting> Function

- Under the main menu touch “ ” icon to enter Setting Function.
- Touch “ ” icon under the Setting menu to exit the Setting Function.

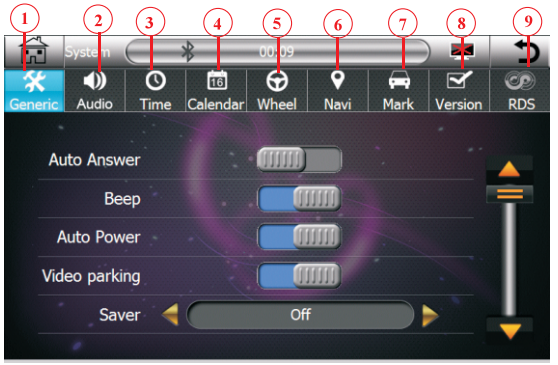

Navigation Function

Basic Operation

Enter/Exit <Navigation> Function

- Under main menu touch " " icon to enter the Navigation status.
- Shut off navigation in the Navigation menu to exit the navigation status.
- Use "**NAVI**" key on the faceplate to quickly enter or exit the navigation function. (If there is"**NAVI**"key on the faceplate.)
- Please refer to "GPS Map Path Setting Steps" for more details of Navigation Function.

IPod Function

Basic operation

Enter/Exit <IPOD> Function

- Under the main menu touch " " icon to enter the IPOD Function.
- When under other status, insert the iPod equipment, it automatically enters the IPOD function.
- Touch " " icon under IPOD menu to exit the IPOD function.
- Pull out the iPod equipment, it automatically exit the IPOD function.

Note: Please refer to <CD/MP3/WMA Disc Play> for the operating method of IPOD interface.

Bluetooth Function

Basic Operation

Enter/Exit <Bluetooth> Function

- Under the main menu touch" " icon to enter the Bluetooth Function.
- Touch " " icon to exit the Bluetooth Function.

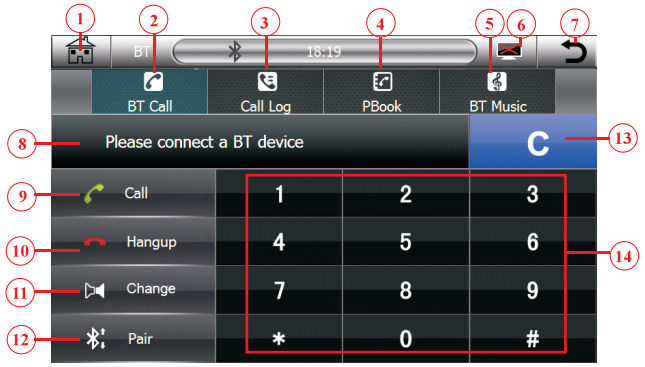

<Bluetooth Function Button> Table

Serial no.	Functions
1	Return to Function list
2	Enter Bluetooth call interface
3	Enter Call records interface
4	Enter phone book interface
5	Enter Bluetooth music interface
6	Shut off the display screen,and open it by touching any position on it
7	Exit Bluetooth Function
8	Display the current operation Information
9	Answer/Dial
10	Hang up
11	Voice switching Key between mobile Phone and Bluetooth
12	Enter into pairing mode
13	Delete a Entered Number
14	Numeric Keypad

Bluetooth Music Function

Basic Operation

Enter/Exit <Bluetooth Music> Function

- Under Bluetooth function interface touch " " icon to enter the Bluetooth Music Function.
- Touch " " icon to exit the Bluetooth Music Function.

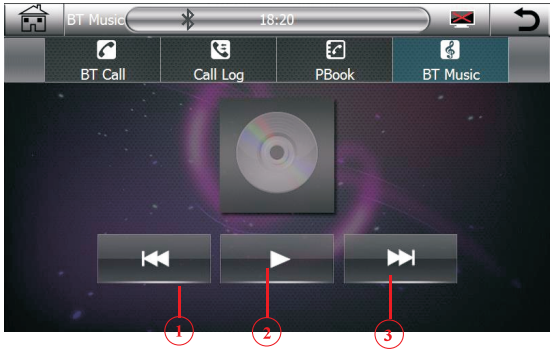

<Bluetooth Music Function Button> Table

Serial no.	Functions
1	Previous song
2	Pause/Play
3	Next song

Instruction of Bluetooth Function

1 Pairing

After entering the Bluetooth status, touch "Pair" icon, open the Bluetooth function of mobile phone to search the equipment, and select "Connect" after searching out Bluetooth of this product, (Bluetooth equipment of this unit is named "EONON"), enter the pair password "5802", the Bluetooth icon is displayed on upward side of the screen after the pairing is completed successfully.

" "Icon of Bluetooth Connection Status:

1.When icon twinkles, it means the Bluetooth equipment is not connected.

2.When icon displays all the time, it means the Bluetooth equipment has been connected.

2. Making a call

Method 1: after pairing has completed successfully, type the phone number you want to dial, and touch "Call" icon, then you can make a call using the Bluetooth function.

Method 2: after pairing has completed successfully, directly make a call using the mobile phone, the machine will pop-out the Bluetooth interface automatically.

3. Answering a call

After pairing has completed successfully, when there is a call coming in, the system automatically switches to the Bluetooth status under whatever modes, touch"Call"icon to answer the phone.

4. Hanging up a call

Touch "Hangup" icon to reject any incoming calls or end the conversation.

5. Conversation switchover

Touch "Change" icon during the conversation to switch the conversation mode to the mobile phone, touch "Change" icon again to switch the conversation mode back to the machine.

6. Bluetooth Music Play (only realizable by the mobile phone that supports the A2DP Protocol)

After Pairing of Bluetooth and mobile phone is successfully completed, touch Play Button in the Bluetooth interface to play the Bluetooth music.

Note: Due to the difference with the brand design of mobile phone, some music can be played only after selected through the mobile phone; some can be played just by directly touching the play key in Bluetooth interface.

! Due to the difference of Bluetooth modules and software used by various brands of mobile phones, there may exist certain difference and even incompatibility with some functions during the actual use process, please forgive us for any inconveniencies caused to you!